


RJ11 Connector for RS232 Communication

Applied To:

Stepper Driver:
DM432C, DM442, DM556, DM856, 3DM683, AM882, DM1182, DM2282,
ES-D505, ES-D808, ES-D1008, CS-D808, CS-D1008

Servo Driver:
DCS810, DCS810S, ACS306, ACS606, ACS806

RS232 Communication Port			
Pin	Name	I/O	Description
1	NC	-	Not connected
2	+5V	O	+5 V power output, left it unconnected when connect to a PC serial port
3	TxD	O	RS232 transmit
4	GND	GND	Ground
5	RxD	I	RS232 receive
6	NC	-	Not connected



Cable connections to a PC serial port (Male DB9)

