


# RJ11 Connector for RS232 Communication

**Applied To:**

Stepper Driver:  
DM432C, DM442, DM556, DM856, 3DM683, AM882, DM1182, DM2282,  
ES-D505, ES-D808, ES-D1008, CS-D808, CS-D1008

Servo Driver:  
DCS810, DCS810S, ACS306, ACS606, ACS806

RS232 Communication Port			
Pin	Name	I/O	Description
1	<b>NC</b>	-	Not connected
2	<b>+5V</b>	O	+5 V power output, <span style="color: red;">left it unconnected when connect to a PC serial port</span>
3	<b>TxD</b>	O	RS232 transmit
4	<b>GND</b>	GND	Ground
5	<b>RxD</b>	I	RS232 receive
6	<b>NC</b>	-	Not connected



**Cable connections to a PC serial port (Male DB9)**

